ChickSafe Pulley Installation

<u>Please Note: to make the cord longer where necessary, tie additional cord to the end of the existing one. Do not pull or unwind any cord from inside the ChickSafe as this will cause incorrect operation.</u>

• Ensure the cord exits vertically below the ChickSafe:



• Ensure each pulley is free to turn and the fixing screw is not over-tightened:



Example ChickSafe and pulley installations:

